

JUMBO TIMER INSTRUCTIONS

You have just purchased the ULTIMATE countdown timer stopwatch. Your timer includes a GIANT, easy to read display, combined with three separate countdown timers (countdown/repeat, countdown/continue, countdown/stop), a stopwatch, a time of day chronograph, and the ability to wear it on your wrist, around the neck or attached to a clipboard, pocket, etc. The unit includes an extra bright EL (Electroluminescent) night light.

- A - Mode Button (MODE)
- B - Function Select Button (SELECT)
- C - Split/Reset Button (SPLIT/RESET)
- D - Start / Stop Button (START/STOP)
- E - Bright "EL" Night Light Button (LIGHT)

The starting point for operating your **JUMBO TIMER** is **NORMAL TIME**.

If **NORMAL TIME** is not displayed, press **MODE** button (A) until it appears ("TIME" will appear above the display).

TO SET TIME OF DAY CLOCK

1. Press **MODE** (A) for 2 seconds. Hour digits will flash ("SET" and "TIME" will appear above the display).
2. Press **START / STOP** (D) to set HOURS (A CR P: 12 Hrs, nothing for 24 Hrs).

NOTE: Press **SPLIT / RESET** (C) to switch between 12 or 24 Hour time format.

3. Press **SELECT** (B) to select MINUTES.
4. Press **START / STOP** (D) to set MINUTES.
5. Press **SELECT** (B) to select SECONDS.
6. Press **START / STOP** (D) to set SECONDS.
7. Press **MODE** (A) to exit the setting mode.

NOTE: To "fast advance" digits, press and **HOLD** (D) Button.

NOTE: If TIME is not set within 30 seconds, display will return to **NORMAL TIME**.

ALARM MODE

To see the Alarm Time, starting from **NORMAL TIME**, press **SPLIT / RESET** (C) until you see "AL" above the display.

1. Press **START / STOP** (D) to activate alarm. ((10)) will show.
2. Press **START / STOP** (D) to de-activate alarm. Nothing will show.

TO SET ALARM TIME

Starting from **NORMAL TIME**, press **SPLIT / RESET** (C) until you see "AL" above the display.

1. Press **MODE** (A) for 2 seconds. Hour digits will flash ("SET" and "AL" will appear above the display).
2. Press **START / STOP** (D) to set HOURS.
3. Press **SELECT** (B) to select MINUTES.
4. Press **START / STOP** (D) to set MINUTES.
5. Press **MODE** (A) to exit the setting mode.

NOTE: To "fast advance" digits, press and **HOLD** (D) Button.

NOTE: If **ALARM** is not set within 30 seconds, display will return to **NORMAL TIME**.

COUNT-UP TIMER

From **NORMAL TIME**, press the **MODE** button (A) until you see "SW" above the display ("LAP" or "CUM" will flash. Disregard them).

1. If numbers (other than 00:00) appear on display and they are "moving", the stopwatch is counting up.
2. Press **START/STOP** (D). Timer will stop.
3. Press **SPLIT / RESET** (C) to **RESET** clock to 00:00.
4. If numbers (other than 00:00) appear on display and they are "not moving", the stopwatch is stopped.
5. Press **SPLIT / RESET** (C) to **RESET** clock to 00:00.

TO COUNT-UP:

1. Press **START / STOP** (D) to start timing.
2. Press **START / STOP** (D) to stop timing.
3. Press **SPLIT / RESET** (C) to reset stopwatch to "00".

STOPWATCH MODE

From **NORMAL TIME**, press **MODE** button (A) until you see "SW" above the display. ("LAP" or "CUM" will flash.)

1. Press **SELECT** (B) to choose either CUM (cumulative split), or LAP (Lap split) timing mode.
2. Press **START / STOP** (D) to start timing.
3. Press **SPLIT / RESET** (C) to take "split". ("SPLIT" will flash.)
4. Press **SPLIT / RESET** (C) to "release" display to show running time (press (C) repeatedly for more split times).
5. Press **START / STOP** (D) to stop timing. ("STOP" will show above the display.)
6. Press **SPLIT / RESET** (C) to reset stopwatch to "00".

1-2 FAST FINISH TIMING:

1. Press **START / STOP** (D) to start timing.
2. Press **SPLIT / RESET** (C) to take "split #1".
3. Press **START / STOP** (D) to take "split #2" (See and record "split #1" at this time).
4. Press **SPLIT / RESET** (C) to release display to show "split #2". (See and record "split #2" at this time).
5. Press **SPLIT / RESET** (C) to reset stopwatch to "00".

COUNT-DOWN TIMER

From **NORMAL TIME**, press **MODE** button (A) until you see "CD" above and to the right of the display.

Press **SELECT** (B) to choose countdown method you prefer. (This shows in the upper left above the display):

- "CR" Countdown and repeat counting down from the preset time when timer reaches 00.
- "CC" Countdown and countup when timer reaches 00.
- "CS" Countdown and Stop at 0:00:00.

After you select the Countdown Mode (CR, CC, or CS), press **MODE** button (A) for 2 seconds to begin **SETTING** your Countdown time. Hour digits will flash. ("SET" will appear above the display).

1. Press **START / STOP** (D) to set HOURS.
2. Press **SELECT** (B) to select MINUTES.
3. Press **START / STOP** (D) to set MINUTES.
4. Press **SELECT** (B) to select SECONDS.
5. Press **START / STOP** (D) to set SECONDS.
6. Press **MODE** (A) to exit the setting mode and begin countdown timing.

NOTE: To "fast advance" digits, press and **HOLD** (D) Button.

NOTE: If TIME is not set within 30 seconds, display will return to **NORMAL TIME**.

TO BEGIN COUNTDOWN TIMING:

1. Press **START / STOP** (D) to start timing.
2. Press **START / STOP** (D) to stop timing.
3. Press **SPLIT / RESET** (C) to reset countdown timer to preset time.

IMPORTANT

- If there is a Countdown Time "SET" on the timer, you will always reset to that time until you change the countdown time.
- If there is no time (00:00) set on the timer, and you start the countdown, it will begin from 24 hours.
- If you want to reset the hours, minutes or seconds digits to 00, put the time in the SET Mode and press "C" button when the digits flash.

"TIME'S UP" ALARM

When the Count-Down Timer reaches 00:00, it will sound an Alarm for one minute, alerting you that the timing has been completed.

SPECIFICATIONS

Accuracy at a normal temperature: $\pm$ or - 15 seconds per month

Display Capacity - Count Down

HOURS / MINUTES	23 hours, 59 minutes
SECONDS	59 seconds

Display Capacity - Count Up

HOURS/MINUTES/SECONDS 23 hrs., 59 mins., 59 secs

Battery

For best results use silver oxide or alkaline battery.

CAUTION

You **must** align arrow $\blacktriangle$ on neck cord clip (or ∇ on clip board clip) with the dots $\bullet \bullet$ (or $\blacktriangle$ on timer holder to "snap" them together. If you don't, you may damage the attachment "hooks".

