



Dual Jumbo Display Timer

DC100

Features:

- Dual jumbo 1" digital display
- 24-Hour countdown/count-up timer with 1-second resolution
- Dual memory for keeping track of two separate times
- Tabletop or wall-mount design for added convenience and visibility
- You can use the count down timer and count up timer at the same time.
- Slide the switch to the CLOCK setting when the timers are not in use

Included Parts:

- One dual timer/clock unit
- One AAA battery
- One double-sided adhesive sticker for optional mount
- Wall mount plate with two Phillips head screws for optional detachable wall mount


Tools You Will Need:

- Phillips screwdriver
- Wall level (optional)



Setup Instructions:

1. Open the battery cover on the back of the dual timer/clock.
2. Insert the included AAA battery.
3. Replace the battery cover.
4. Fold the unit at the hinge **B** to stand it up or unfold to lay flat.
5. Optional secure mount: peel off one side of the protective backing from the adhesive sticker, position and press the sticker to the back or to the bottom of the unit, peel off the other side of the protective backing from the adhesive sticker, then position and gently press the unit to the desired location where you want the clock to be securely mounted. The adhesive sticker is not re-positionable.
6. Optional detachable wall mount: position the wall plate in the desired location with the notch facing upward, use a level if desired; with a Phillips screwdriver, securely attach the wall plate with the two included screws through the two holes. Carefully slide the unit onto the wall plate, ensuring the notch aligns securely into the slot **H** on the back of the unit, applying gentle pressure as needed. The unit should fit snugly without any wobbling or movement. To detach the unit, gently lift it upward to release the slot **H** on the back of the unit from the upward facing notch on the wall plate.

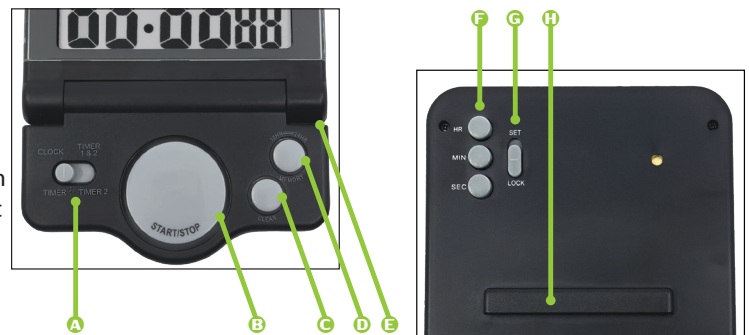

How to Start the Countdown Timer:

1. On the front, slide the switch **A** to the TIMER 1 or TIMER 2 position for the timer you want to use.
2. On the back, slide the SET/LOCK switch **G** to the SET position.
3. On the back, press the HR, MIN and SEC buttons **F** to enter the desired countdown time.
4. On the front, press the 12HR/24HR/MEMORY button **D** to save the time to the memory (optional).
5. Repeat steps 1-4 for the second timer (optional).
6. On the back, slide the SET/LOCK switch **G** to the LOCK position.
7. Slide the switch **A** to TIMER 1, TIMER 2 or TIMER 1 & 2 position to start the countdown(s).
8. On the front, press the START/STOP button **E** to start/stop/resume the timer.
9. On the front, press the CLEAR button **C** to reset the timer to zero.
10. Press the 12HR/24HR/MEMORY button **D** to recall saved times.

How to Start the Count Up Timer/Stopwatch:

1. On the front, press the START/STOP button **E** to start counting up, just like a stopwatch.
2. Press the START/STOP button again to freeze the timer.
3. Press the START/STOP button to resume.
4. Press the START/STOP button, then press the CLEAR button **C** to reset the timer.

How to Set the Clock:

1. On the front, slide the switch **A** to the CLOCK position.
2. Press the 12HR/24HR/MEMORY button **D** to choose either the 12-hour or 24-hour format.
3. On the back, slide the SET/LOCK switch **G** to the SET position.
4. On the back, press each of the HR, MIN and SEC buttons **F** to set the time.
5. On the back, slide the SET/LOCK switch **G** to the LOCK position.

What to do When the Time is Up Instructions:

1. The timer will beep and display "TIME'S UP" on the display.
2. Press the START/STOP button **E** to stop the alarm(s).
3. Press the CLEAR button **C** to reset the timer to zero.
4. Slide the switch **A** to the CLOCK position when the timer(s) are not in use.