



I) General Description

1. 3.0 Volt operating voltage (1 x CR-2032).
2. 5 buttons operation.
S1 : MODE
S2 : START/STOP
S3 : SET
S4 : LAP-RESET
S5 : EL
3. Auto leap year (range from 1999-2029). 12/24 Hour display format selectable.
4. Dual Time display.
5. Daily Alarm and Hourly Chime function.
6. Timer (count-down & up, max. 23:59 59)
7. Chronograph (10 memories, max. 23:59'59"99each)
8. For setting and recall mode, it will auto return to previous mode after 30 sec unattended.
For other mode, it will auto return to Real Time mode after 30 sec unattended, except Timer/Chrono is running.

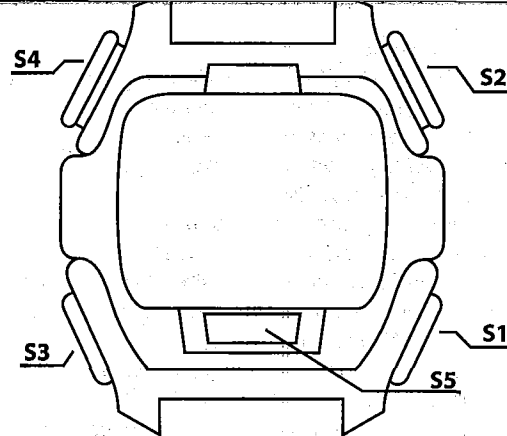

II) Function and Mode Descriptions

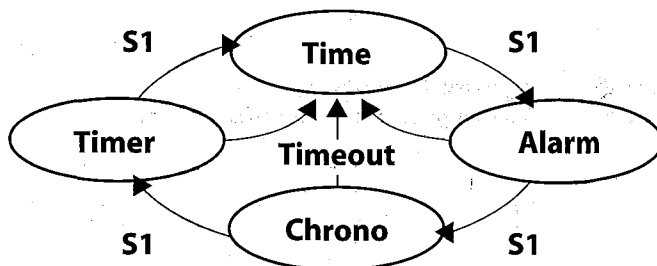


A) Time mode

1. Display shows "HR:MIN SEC" on the lower row and "MON-DATE DOW" on the upper row (DOW=Date Of Week).
2. If "Time 1" is selected, T1 will on. Else, "Time 2" is selected, T2 will on.
3. Press and hold S3 key for 2 SEC to enter into Time setting mode.
4. Press S2 key to toggle 12/24 hr format.
5. Press S4 key to view "NEXT TIME" for 3 SEC.
6. Press and hold S4 key for 2 SEC to switch to "NEXT TIME".
7. Press S1 key to Alarm mode.


B) Time setting mode

1. The SEC digit is first blinking. Press S2 key to advance, press and hold S2 key for fast advance. Press S1 key to select next digit.
2. The setting sequence is SEC (Reset to 00), MIN (00-59), HR (00-23 or 1-12 plus P), YEAR (1999-2029), MONTH (1-12), DATE (1-31) and DOW (MO-SU).
3. Press S1 key at YEAR digit setting will jump back to SEC digit setting.
4. Press S3 key to exit this setting mode.
5. Auto exit to previous mode for 30 SEC unattended.

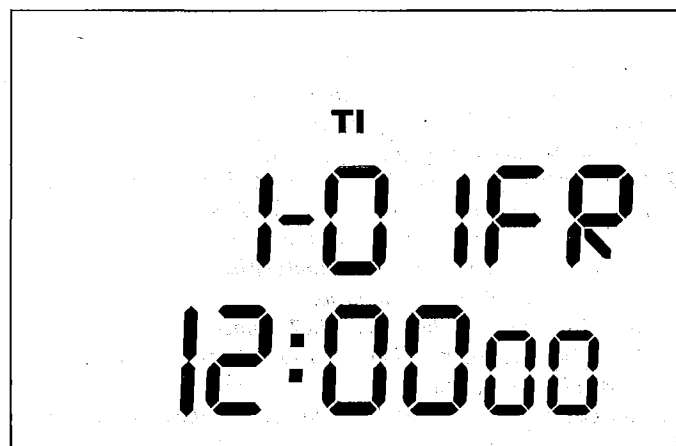

C) Alarm mode

1. Display shows "HR:MIN AL" on the lower row and "ALARM STATUS" on the upper row.
2. Press and hold S3 key for 2 SEC to enter into Alarm setting mode.
3. Press S2 key to toggle alarm on/off. When one of the alarm is turned on, alarm icon will be shown on the display in any mode.
4. Press S4 key to toggle chime on/off. When chime is turned on, chime icon will be shown on the display in any mode.
5. Press and hold S4 key for 2 SEC to switch to "NEXT ALARM".
6. Press S1 key to Chronograph mode.
7. Auto exit to Time mode for 30 SEC unattended.

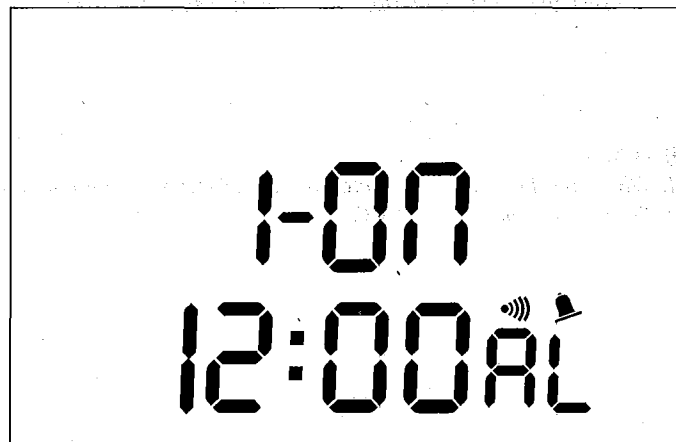

D) Alarm setting mode

1. The MIN digit is first blinking. Press S2 key to advance, press and hold S2 key for fast advance. Press S1 key to select next digit.
2. The setting sequence is MIN (00-59), HR (00-59), HR (1-23 or 1-12 plus P).
3. Press S1 key at HR digit setting will jump back to MIN digit setting.
4. Press S3 key to exit this setting mode and auto enable alarm if ALARM MIN/HR have changed.